

Пульт DVD универсальный RM-230E

AIWA, AIERPRINCE, AIKO, AKAI, AKISHI, AKUSTIC, AMOI, APEX, AONE, AODELONG, AUDIA, AUDIOVOX, AVLIGHT, BBK, BULANTE, CAIXING, CD VIDEO, CHANGHONG, COBY, CLASSIC, CYBERHOME, DAEWOO, DESAY, DINGTIAN, DIHE, DENON, DIGIXMEDIA, DVD, ELECTRA, F & D, FISHER, GE, GEWANG, GIEC, GO VIDEO, GPX, GVG, HAIER, HAOIER, HARMAN RARDON, HITACHI, HISENSE, HIMAGE, HITER, HUABAO, HYUNDAI, IDALL, JINGEWANGPAI, JINGWEI, JUGAO, JVC, KENWOOD, KETAI, KONKA, LAFAYETTE, LASONIC, LG, LINITRON, LONGZHIPAI, MARANTZ, MAJESTIC, MALATA, MEDA TANSS, MITSUI, MITZU, MITSUBISHI, MTB, NINTAUS, NAKAMICHI, NAPA, NORCENT, ONKYO, OKON, PANASONIC, PANDA, PAI GAO, PHILCO, PHILIPS, KARAOKE, PIONEER, PROSONIC, POWER, SOUND, QISHENG, TSINGHUA, TONGFANG, ROYAL, RCA, SAMSUNG, SAST, SANYO, SHARP, SHINCO, SHANLING, SHANSHUI, SHERWOOD, SONY, SOWA, SONASHI, SOUND TRAC, SKYWORTH-RGB, SUPERSONIC, SMC, STAR, SVA, TOSHIBA, TIANLI, TCL, TEAC, THOMSON, TOP TEC, UNIREX, UNITRON, VCD2, VICTOR, VIFA VOX, WEGA TANSS, WANYAN, WANBAO, XIANPAI, YMT, YOUBISHEN, YAMAKAWA, YUXING, YAMAHA, ZONDA и др.

Инструкция по применению пульта

В многофункциональный пульт дистанционного управления HR-230E интегрировано более 1000 пультов дистанционного управления для управления DVD.

Настройка по марке и кодам. (введение кода их прилагаемого списка)

1. Найдите код из 3 цифр в “Списке кодов” для соответствующей марки. Если имеется более одной группы кодов, выберите первую. Если пульт не работает, выберите вторую и так далее до тех пор, пока пульт не заработает. Если бренд отсутствует в “Списке кодов”, воспользуйтесь функцией “Ручной поиск кода”.
2. Нажмите и удерживайте кнопку “SET” в течение 4-х секунд. При этом должен загореться светодиодный индикатор, показывающий, что Вы вошли в режим программирования. Если индикатор не загорелся, повторите все действия с самого начала.
3. Введите найденный вами код из 3 цифр. При введении первой и второй цифры светодиодный индикатор должен мигнуть один раз. После введения третьей последней цифры светодиодный индикатор должен погаснуть. Это означает, что установка кода завершена. Вы можете использовать пульт дистанционного управления для управления аппаратом.

ПРИМЕЧАНИЕ: При установке кода интервал между нажатием кнопок не может превышать 15 секунд.

Ручной поиск кода.

1. Включите DVD, с которым Вы будете работать.
2. На универсальном пульте нажмите и держите кнопку “SET” в течение 4-х секунд.
3. Светодиодный индикатор будет гореть постоянно. Направьте пульт на приемную часть Вашего устройства.
4. Нажимайте и отпускайте кнопку PLAY. В этот момент универсальный пульт будет излучать серию импульсов ВОСПРОИЗВЕДЕНИЯ. Продолжайте это до тех пор, пока Ваше устройство не начнет реагировать на команды с пульта.
5. Когда DVD начнет воспроизведение, нажмите кнопку SET, чтобы остановить режим ручного поиска.

6. Проверьте правильность функционирования Вашего устройства. Если не все кнопки универсального пульта выполняют свои функции или работают неправильно, продолжите ручной поиск. Повторите пп 2-6, пока не добьетесь желаемого результата.

7. Значение трехзначного кода, устраивающего Вас, можно просмотреть и запомнить(см. «Просмотр кодов»). В следующий раз при случайном сбросе кода вы уже не будете применять ручной режим поиска, а сразу введете нужный вам код

Просмотр кодов.

Для просмотра трехзначного кода нажмите и удерживайте SET + 1 (2, 3). Количество вспышек индикатора будет соответствовать первой цифре кода. SET + 2 -второй цифре, SET +3 -третьей цифре. Цифра 0 выражается отсутствием свечения.

Universal DVD Remote RM-230E User's Manual

 
Thank you for purchasing this remote control. After reading this User's Manual, please keep it in a good place for future reference.

Product Introduction

RM-230E is a latest universal DVD remote control put out by Our company. The unit integrates the functions of several hundreds of DVD brands in the world, and is provided with unique, steady model search function, making your setting much easier.

The RM-230E Universal remote control is an optimal choice in case your DVD remote control is damaged, lost or replaced.


Panel Description:

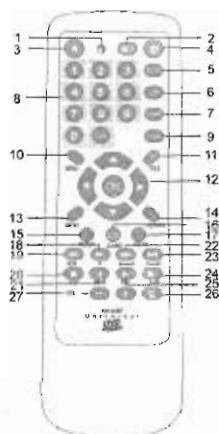

- | | |
|-------------------------|------------------|
| 1. Work indicator | 13. Menu |
| 2. Setting | 14. Return Menu |
| 3. Eject | 15. REPEAT |
| 4. Power supply | 16. SOUND |
| 5. System selection key | 17. CLEAR |
| 6. LANGUAGE/Angle | 18. Fast Forward |
| 7. Caption | 19. Rewind |
| 8. Numeric key | 20. stop |
| 9. ZOOM | 21. Pause |
| 10. SETUP | 22. Backward |
| 11. TITLE | 23. Forward |
| 12. MENU: | 24. SLOW |
| OK | 25. Play |
| LEFT | 26. Mute |
| UP | 27. Volume "+/-" |
| DOWN | |
| RIGHT | |

Battery Installation

 Open the battery cover, put in two new AAA (No. 7#) alkaline batteries (not attached) according to the "+/-" symbol inside the battery pack as shown in the figure

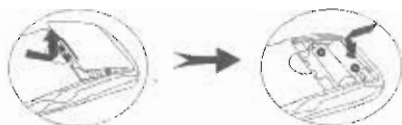

Cautions on Battery Use

- When the batteries are being replaced, the original setting can remain 45 minutes if no key on the remote control is touched. Otherwise, the original setting will be lost, and you have to reset your device.
- As our remote control of low power consumption, the batteries have 15 months service life under normal conditions. However, this service life may be shortened if used or operated improperly.
- Do not use old and new batteries or batteries of different models at the same time.
- In the event of battery leakage, take out the batteries, wipe the battery compartment clean, and exchange new batteries.
- If this remote control is intended to be not in use for a long time, please remove the batteries.



Setting of Remote controller

Two methods (Method A/B) are provided to set this remote control, any one of which can be used in operation.

A. To search applicable models by entering manual codes

- Switch on the DVD set and find a code that represents the brand of the DVD from the code list. Please see the figure:

(the code list attached to the back)

 
- Hold the "SET" key until the indicator illuminates.

- Enter a 3-digit code in the first group corresponding to the model, such as:

- The indicator goes out. Setting is finished.

- Detect whether the keys on the remote control can work normally.

※ If not, restart the setting from Step 1.

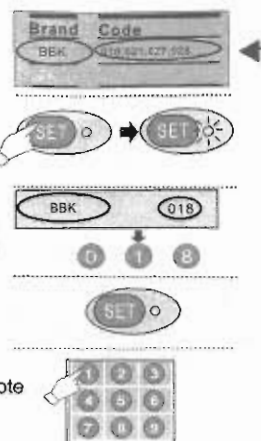


☆ Due to too many codes corresponding to your DVD model, you are recommended to set your DVD set code by code, and finally select one code most suitable for your DVD set.

B. To search applicable models in a manual steady manner

- Open the DVD and place into the DVD disk, aim the remote control at the DVD player, shown in the diagram:



 
- Hold the "SET" key until the indicator illuminates.



- Press "PLAY" and then release, check whether the DVD player is playing the DVD, if not, please repeat this procedure, shown in right diagram:



 - When DVD is playing, immediately press "SET" key, indicator lights off



- Test whether the keys on the remote control function well:



※ If keying does not work, reset from Step 2.

Warm Tips



If any problem occurs during setting or using this remote control:

- To set this remote control, please follow the steps in "To search applicable models by entering manual codes" carefully. In case you are still unable to control your device after setting the first group of codes, set other codes one by one in the order of codes. If all the codes fail to enable your remote control functional (or if your household appliance is not included in the list), please try "To search applicable models in a manual steady manner".
- If you have made mistakes during code input, you can simply re-enter a proper three-digit code as long as the work indicator does not go out. You need resetting from step 1 if it goes out.
- When searching applicable models in a manual steady manner, you must be patient to wait when search is being processed because of too many codes.
- If this remote control is operated improperly, the unit may be locked up. In this case, remove the batteries, replace them 20 minutes later, and the unit can restore its normal functions.

Technical Parameters

Distance of remote control: about 8 meters (depending on types of machine)

Type of power supply: DC 3V

Battery model: AAA battery, 2 pcs

After-sale Service

If any problem occurs or this unit fails to work temporarily when using this remote control, please contact our company immediately, and we will make every effort to provide you with excellent services. However, this Company is not liable for a remote control subjected to unauthorized

⚠ To enjoy after-sale service, please be sure to fill in the warranty card when purchasing the product and retain the small note or receipt.

※ Our company reserves the right to interpretation of the User's Manual. Design and technical parameters may vary without notice.

CODE FORM FOR THE COMPONENTS

Brand	Code
Aiwa	150,180
Aierprince	066,067
AIKO	179
AKAI	006
AKISHI	181
AKUSTIC	179,258
Amoi	111,112,114,135
APEX	182
Aone	299
Aodelong	316
AUDIA	298
AUDIOVOX	183
AVLIGHT	143
BBK	018,021,027,028,033,048,078,091,094,099,145,287,312
BULANTE	064,065
CAIXING	088,095
CD VIDEO	253,254,255,256
CHANGHONG	136,137,138
COBY	185
CLASSIC	184,270,271
CYBERHOME	186
DAEWOO	086,087,187,188,189,190,191,192,193,194,267,279,325
DESAY	026,074,117,300
DingTian	127
Dihe	070,077,107,317
DENON	195
DIGIXMEDIA	196
DVD	016,019,261
ELEKTRA	192,197
F&D	285
FISHER	233,262

Brand	Code
GE	231
GeWang	328
GIEC	089,292,294,295,296,310,322
GO VIDEO	199,200
GPX	201
GVG	289,290
Haier	116,146
Haoji	068
HARMAN KARDON	276
HITACHI	202
HISENSE	134,143,311
Himage	125
HITER	089
HUABAO	029,061,062,063,302
Hyundai	085
IDALL	128
Jingewangpai	031,283
JingWei	011
Jugao	318
JVC	045,203,151,275
KENWOOD	075,204,205,206
Ketai	030
KONKA	139,207
LAFAYETTE	225
LASONIC	208,209
LG	008
LINITRON	241
LONGZHIPAI	284
NINTAUS	003,035,071,079,080,081,082,090,093,129,130,291,320,322
NAKAMICHI	220
NAPA	221,277
NORCENT	222
MARANTZ	211,212,213,227
MAJESTIC	210,265
Malata	002,009,023,024,073,146,147,151,297,313

Brand	Code
MEGA TANSS	214
MITSUI	216,217,269
MITZU	179,251
MITSUBISHI	215
MTB	218,219
ONKYO	043,223,224
OKON	072
PANASONIC	014,204,273,274
PANDA	038,051,052,053,102,105
PAI GAO	327
PHILCO	225,226,263,268,272
PHILIPS KARAOKE	228
PHILIPS	012,143,152,153,154,227,264
Pioneer	044,229
PROSONIC	252
POWER SOUND	179
QiSheng	005,037,092,098,101,282,305,306,307,308,323,331
TSINGHUA TONGFANG	056,057,309
ROYAL	225,272
RCA	230,231
SAMSUNG	004,006,017,049,104,149,202,232,266
SAST	011,020,038,059,060,076,140,142,288
SANYO	233,234
SHARP	235,236,237
Shinco	001,010,108
SHUMALING	036
SANSUI	013,046
SHERWOOD	319
SONY	040,042,177,178,260
SONICO	259

Brand	Code
SOWA	155
sonashi	304
SOUND TRACK	257
SKYWORTH-RGB	022,025,032,034,058,096,097,100,119,121,293,301,314,321
SUPERSONIC	225,239,272
SMC	238
star	118
SVA	108
TOSHIBA	041,069,242,243
TIANLI	131
TCL	000,015,039,054,055,120,315
TEAC	240
THOMSON	083,230
TOP TEC	241
UNIREX	244
UNITRON	241
VCD2	245
Victor	047,084,103
Vifa	050
VOX	246
WEGA TANSS	278
wanyan	126,146
WANBAO	296
XIANPAI	070
YMT	303,304
YOUBISHEN	124
YAMAKAWA	248
YuXing	115,156
YAMAHA	227,247
ZONDA	249,250
OTHER BRAND	007,016,019,106,109,110,113,122,123,132,133,157,141,144,148,158,159,160,161,162,163,164,165,166,167,168,169,170,171,172,173,174,175,176,245,261,280,281,324,329,330,332